



## ENGLISH

### HAIRDRYER

#### Aqua Ionic technology

Built-in ionizer produces negatively charged ions, to remove static charge, from hair and enhance its water absorbing capabilities, protecting hair from overdrying while hairstyling, and making it look healthy and well-groomed.

#### DESCRIPTION

1. Air supply speed switch (0/I/II)
2. Heat setting switch (I/II/III)
3. Cool shot button
4. Nozzle
5. Removable air inlet grid
6. Hairdryer handle
7. Hanging loop
8. Diffuser

#### ATTENTION!

- Do not use the unit near containers filled with water (such as bathtubs, swimming pool etc.).
- Nach der Nutzung im Badezimmer trennen Sie das Gerät vom Stromkreis ab und zwar, ziehen Sie den Netzstecker aus der Steckdose. Proceeding this way, slowly straighten each lock from root to end. After you finish straightening locks of the lower hair layer, start to straighten the locks of the middle layer and finish the process by straightening locks of the upper hair layer.
- Natural hair style**  
Set the switches (2) to the low heating position «+», select the required air supply speed using the switch (1) and dry your hair. Remove excessive moisture from hair with your hand or a comb and constantly move the hairdryer above your hair.

#### Quick drying

- Set the switch (2) to the maximal heating position «++», select the corresponding air supply speed using the switch (1) and dry the hair preliminarily. When the hair is almost dry, attach the nozzle (4), decrease the heating degree using the heating switch (2) and decrease the air flow speed using the switch (1).

#### Safety measures

- Divide your hair into locks and layers, start straightening each lock from root to end, and then, carefully brush the hair down and straighten each lock directly from the nozzle (4) at your hair.
- When using the hairdryer in a bathroom, disconnect it immediately after usage, pull the power plug out of the socket, as water closeness is dangerous even if the unit is switched off.
- For additional protection you can install a residual current device with nominal operation current not exceeding 30 mA into the mains of the bathroom; contact specialist for installation.

#### HAIR CARE

- To get the best results (before drying and styling) wash your hair with shampoo, dry it with a towel to optimise hair's absorbency and then, apply excess moisture to hair with your hand or a comb and geft it.

#### Quick drying

- Set the switch (2) to the maximal heating position «++», select the corresponding air supply speed using the switch (1) and dry the hair preliminarily.

- When the hair is almost dry, attach the nozzle (4), decrease the heating degree using the heating switch (2) and decrease the air flow speed using the switch (1).

#### ATTENTION!

- Do not use the unit near containers filled with water (such as bathtubs, swimming pool etc.).
- Nach der Nutzung im Badezimmer trennen Sie das Gerät vom Stromkreis ab und zwar, ziehen Sie den Netzstecker aus der Steckdose. Proceeding this way, slowly straighten each lock from root to end. After you finish straightening locks of the lower hair layer, start to straighten the locks of the middle layer and finish the process by straightening locks of the upper hair layer.

#### Natural hair style

- Set the switches (2) to the low heating position «+», select the required air supply speed using the switch (1) and grip locks firmly between fingers, turn them to the side of natural waving and dry them, directing air between fingers. Once the required effect is achieved press and hold the cool shot button (3) and fix each lock.

#### Description

- Set the switches (1 and 2) to the low heating/low heat position «+» and attach the nozzle (4) to direct air flow.

- Divide your hair into locks and create a required style by means of a round hair-brush. During hair styling direct the air flow straight onto your hair in desired way.

- If necessary direct air flow at each lock for 2-5 seconds to fix hair. Styling time is determined individually for each lock.

- “Cool air” sun spray**

- This model has a cool shot function used for fixing your hair. Press and hold the cool shot button (3) - it enables to keep the created style.

#### Using of diffuser

- The air flow diffused by the diffuser (8) enables soft drying and adds volume to your hair. Special “fingers” volumize your hairstyle, while air flow is directed to the hair roots.

#### Overheating protection

- This hairdryer has overheating protection that switches the unit off, if the outgoing air is too hot. If hairdryer switches off during operation, turn it off by the switch (1), setting it to the “0” position, then plug the hairdryer, make sure that the air inlets and outlets are not blocked, then turn the unit back on again.

- Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

- Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

#### Cleaning and care

- Set the switch (1) to the “0” position and disconnect the unit from the mains.

- The nozzle of the hairdryer can be cleaned with a person who is responsible for their safety on safety measures and information about dangers that can be caused by improper use of the unit.

- These instructions do not apply to children under 8 years old. If the nozzle is damaged, do not use it.

- Never immerse the unit into water or other liquids.

- When unplugging the unit pull the plug but not cord.

- Do not touch the hairdryer body or power plug with wet hands.

- Do not drop the unit or do not keep the unit in places where it can fall into a bath or a sink, filled with water, do not immerse the unit into water or other liquids.

- Do not operate the unit while taking a bath.

- If the unit was dropped, unplug it immediately.

- And only then you can take it out of water.

- For children safety reasons do not leave polyethylene bag used as a packaging, unattended.

- Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

- Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

#### Hairdryer

- Set the switch (1) to the “0” position and disconnect the unit from the mains.

- The nozzle of the hairdryer can be cleaned with a person who is responsible for their safety on safety measures and information about dangers that can be caused by improper use of the unit.

- These instructions do not apply to children under 8 years old. If the nozzle is damaged, do not use it.

- Never immerse the unit into water or other liquids.

- When unplugging the unit pull the plug but not cord.

- Do not touch the hairdryer body or power plug with wet hands.

- Do not drop the unit or do not keep the unit in places where it can fall into a bath or a sink, filled with water, do not immerse the unit into water or other liquids.

- Do not operate the unit while taking a bath.

- If the unit was dropped, unplug it immediately.

- And only then you can take it out of water.

- For children safety reasons do not leave polyethylene bag used as a packaging, unattended.

- Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!**

- Do not allow children to play with polyethylene bags or packaging film. Danger of suffocation!

#### Storage

- Always unplug the hairdryer if it is not being used.

- Handle the power cord with care, do not pull, twist or stretch the cord especially near the plug or junction point.

- Never wind the cord around the hairdryer body or handle, as it damage the cord.

- Do not twist the hairdryer operating cord.

- The unit is equipped with a hanging loop (7) for easy storage, you can store the unit on this loop in the bathroom providing that no water gets on the unit.

- Keep the power cord and power plug insulation dry.

- Never use the unit if the power cord or the power plug is damaged, the unit works improperly or after it was dropped. Contact an authorized service center for all repair issues.

- Let the unit cool down before taking it away for storage and never wind the power cord around the unit.

#### Delivery set

1. Hairdryer - 1 pc.

2. Nozzle - 1 pc.

3. Diffuser - 1 pc.

4. Instruction manual - 1 pc.

#### The unit is intended for household usage only.

#### Using of hairdryer

- After unit transportation or storage at low temperature keep it for at least two hours at room temperature before switching on.

- Unit operating life is 3 years**

#### Technical specifications

- Power supply: 220-240 V - 50 Hz

- Maximal power consumption: 2200 W

#### The manufacturer preserves the right to change the specifications of the unit without a preliminary notification.

#### Guarantees

- Detailed regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

- «0» - the hairdryer is off;

- «+» - low speed;

- «++» - high speed;

- Use the switch (2) to set the required air flow temperature:

- «++» - low heating;

- «+» - medium heating;

- «0» - cool shot button for hairfixing.

#### Note:

- During the first operation some foreign smell from the heating element may occur, this is normal.

## DEUTSCH

### HAARTROCKER

#### Aqua Ionic Technologie

- Der eingebettete Ionisator erzeugt Anionen, die die statische Aufladung der Haare verringern und deren Feuchtigkeitsaufnahme erhöhen, dadurch verzocknet Ihr Haar während des Stylings nicht, und sieht glänzend und gepflegt aus.

#### Beschreibung

1. Schalter der Luftstromgeschwindigkeit (0/I/II)
2. Heizungsstufe-Schalter (I/II/III)
3. Taste der Kühlstrahl (++)
4. Konzentratoren- und -abtriebsdüse
5. Abnehmbarer Lufteinlassgrill
6. Haartrockner-Griff
7. Aufhängegurt
8. Diffusor

#### Achtung!

- Do not use the unit near containers filled with water (such as bathtubs, swimming pool etc.).
- Nach der Nutzung im Badezimmer trennen Sie das Gerät vom Stromkreis ab und zwar, ziehen Sie den Netzstecker aus der Steckdose. Proceeding this way, slowly straighten each lock from root to end. After you finish straightening locks of the lower hair layer, start to straighten the locks of the middle layer and finish the process by straightening locks of the upper hair layer.

#### Natürliche Haarschwamme

- Set the switches (1 and 2) to the low heating position «+», select the required air supply speed using the switch (1) and dry your hair. Remove excessive moisture from hair with your hand or a comb and constantly move the hairdryer above your hair.

#### Haarschwamm

- Set the switches (1 and 2) to the position of the maximal heating «++», select the corresponding air supply speed using the switch (1) and dry the hair preliminarily.

- When the hair is almost dry, attach the nozzle (4), decrease the heating degree using the heating switch (2) and decrease the air flow speed using the switch (1).

#### Wichtiges

- Bei nicht gestattet, dieses Gerät in der Nähe von mit Wasser gefüllten Becken (Badezimmer, Waschbecken usw.) zu benutzen.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose. Wenn Sie das Gerät nach dem Styling aus dem Wasser nehmen, ziehen Sie den Netzstecker aus der Steckdose.

- Als Sicherheitsmaßnahmen kann das Gerät ausgeschaltet werden.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzstecker aus der Steckdose.

- Um das Gerät zu schützen, ziehen Sie den Netzste

