



## ENGLISH

### HAIR CLIPPER

- Lower blade
- Upper blade
- Blade moving lever
- Power switch (0/1)

### ACCESSORIES

- Attachment 3mm
- Attachment 6mm
- Attachment 9mm
- Attachment 12mm
- Comb
- Hair scissors
- Lubricating oil
- Brush

### Important safety measures

- Read the instructions carefully before using the hair clipper.
- Before switching on the unit, make sure that voltage in your mains corresponds to the voltage indicated on the unit.
- The unit is not intended for usage by children or disabled persons.
- Never leave the operating unit unattended.
- Do not allow the children to use the unit as a toy.
- Keep the unit out of reach of children.
- Use the unit only for the intended purposes.
- Use only the attachment s and accessories, supplied with the unit.
- Do not use the unit in places with high humidity, while taking a bath or a shower. Do not keep the unit near a bath or a shower. Do not immerse the unit into water or other liquids; do not wash the unit under running water.
- Do not touch the unit with wet hands.
- Do not try to take the unit if it fell into water, immediately take the plug out of the socket. Do not touch water.
- Do not use the hair clipper if the power plug or the cord is damaged. Apply to the authorized service center for replacement of the power cord.
- Do not use the unit in places with high temperature. Do not place the power cord near hot surfaces.
- Switch off the unit and take the comb 1 (3 mm) or 2 (6 mm), sheath the Haare in the direction of the Haarwirbel zum Scheitel vor dem Haarschneiden (Abb. 1). Bewegen Sie langsam die Haarschneidemaschine von unten nach oben und vom Kopf aus. Schneiden Sie Ihre Haare und das Wasser, beginnend vom unteren Hinterkopf und um die Ohren.
- Step 1**
- Hold the unit in a way that the blades are directed upwards. Hold the clipper with its blades up. Start cutting in direction of hair growth (Pic. 1). Slowly move the clipper up. Cut hair from below back of the head and near ears.
- Step 2**
- Switch off the unit, set the attachment for long hair 3 (9mm) or 4 (12 mm) and continue cutting hair near the crown of the head (pic. 2).
- Step 3 Cutting in the temple area**
- Switch off the unit, set the comb 1 (3 mm) or 2 (6 mm) and cut hair in the temple area. Then set the comb 3 (9 mm) or 4 (12 mm) and continue cutting the hair in the direction of the crown of the head.
- Step 4 Cutting in the frontal crown area**
- Using the comb 3 (9 mm) or 4 (12 mm), cut hair from the crown towards the top against the direction of hair growth (pic. 4). You can cut hair against hair growth and along hair growth, but bear in mind that hair that is cut against hair growth will be shorter than that which is cut along hair growth. Using the combs 1 (3 mm) and 2 (6 mm) for very short haircut. To longer hair, use the necessary comb. After cutting, clean the clipper with fingers and then sheath the hair strands between fingers and cut them with the clipper. You can use a brush: brush hair strands and cut them over the clipping (pic. 5, 6).
- Always start cutting from the back of the head. Comb hair with the comb to find out uneven strands.
- Step 5 Final part:**
- In the final stage of the haircut modeling, remove the attachment from the unit, turn it with the blades to the hair side and carefully cut hair on the temples and the neck. Do not press the unit strongly, when opened blades contact the skin, you can get an injury or cuts (pic. 7).
- Care and care**
- If the blades were removed for cleaning, replacement, they need to be aligned.
- Align the blades on the flat and tighten the fastening screw. The lower blade should be rotated forward. If the rotation is not possible, the clipper cannot be used.
- When you cut hair, the blades, add several drops of oil (supplied) on the blades, switch on the unit for several minutes (30-40 sec.), then switch off the unit and take the plug out of the socket. Slightly loose the fastening screws of the lower blade and align the blades. After aligning the blades do not forget to tighten the fastening screws of the lower blades.
- Lubricating oil**
- To maintain the unit in a good condition, you should lubricate the blades each time after haircut. Do not use plant oil or oil, which includes kerosene or other solvents. Solvents are subjected to evaporation, and the remaining thick oil can slow down the speed of the blades.
- In time solvents evaporate and thick oil remains and will slow down the movement of the blades. For lubricating the blades use only the oil, supplied with the unit.
- Attention:** Use ONLY the oil supplied. DO NOT use plant oil, fat, mixture of oil and solvent for lubrication. Solvents are subjected to evaporation. After that thick oil that is remained can slow the movements of the blades.
- Cleaning the clipper**
- The blade moving lever is conveniently located under the thumb (if you are a right-hander). During cutting hair you can move the blade, pressing the lever, adjusting the length of the hair without use of the comb. The blade moving lever is located at the bottom of the hair clipper will be the shortest. In the down position of the lever, the length of the cut hair is the same as when using the comb attachment 1 (3 mm). Changing the position of the lever while cutting hair, you can select the necessary length of the hair to cut.
- If hair is pressed between the blades while cutting hair, to release them you should move the lever from the down position to the down position several times.
- Remove the clipper with oil. Clean the unnecessary oil with a dry cloth.
- Specifications:**
- Power rating: 220-240 V ~ 50 Hz
- Power consumption: 8 W
- Time of constant operation: 1 hour

The manufacturer reserves the right to change the device's characteristics without prior notice.

### Service life of the unit - 3 years

### GUARANTEE

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

**Instruction on modeling a haircut**  
Before cutting switch on the unit and make sure that it operates without malfunction, the blades run smoothly; if there is much oil on the blades, remove it with a dry cloth.

During operation of the unit, constantly check the power cord, do not allow its multiple over twisting, never switch off the unit and straighten the power cord.

The head of the person whose hair you are cutting should be at the level of your eyes.

Cover the shoulders with a towel, comb the hair.

**Reminder**  
Cut one-pass small amount of hair, if necessary repeat the cut to cut for additional haircut.

The best results are achieved while operating with dry, not wet hair.

**Start cutting**  
For the first time it is better to leave longer hair. With

**Detailed information about the EMC requirements:**  
Conformity declaration: *CE* Requirements as laid down by the Council Directive 89/336/EEC and to the Low Voltage Regulation (73/23 EEC)

This product conforms to the EMC-

## DEUTSCH

### HAARSCHNEIDEMASCHINE

- Untere Klinge
- Oberer Klingen
- Klingengelenkrichtung
- Netzschalter (0/1)

### ZUBEHÖR

- Attachment 3mm
- Attachment 6mm
- Attachment 9mm
- Attachment 12mm
- Comb
- Hair scissors
- Lubricating oil
- Brush

### Wichtige Vorsichtsmaßnahmen

- Lesen Sie die Betriebsanleitung vor der ersten Nutzung der Haarschneidemaschine aufmerksam durch.
- Vergewissern Sie sich vor dem Einschalten des Geräts, dass die Netzspannung mit der Spannung Ihres Geräts übereinstimmt.
- Diese Maschine ist für Kinder und behinderte Personen nicht geeignet.
- Die Einheit ist nicht für das Kinderspielzeug bestimmt.
- Bewahren Sie das Gerät in einem für Kinder unzugänglichen Ort auf.
- Never leave the operating unit unattended.
- Do not allow the children to use the unit as a toy.
- Keep the unit out of reach of children.
- Use the unit only for the intended purposes.
- Use only the attachment s and accessories, supplied with the unit.
- Do not use the unit in places with high humidity, while taking a bath or a shower. Do not keep the unit near a bath or a shower. Do not immerse the unit into water or other liquids; do not wash the unit under running water.
- Do not touch the unit with wet hands.
- Do not try to take the unit if it fell into water, immediately take the plug out of the socket. Do not touch water.
- Do not use the hair clipper if the power plug or the cord is damaged. Apply to the authorized service center for replacement of the power cord.
- Do not use the unit in places with high temperature. Do not place the power cord near hot surfaces.
- Switch off the unit and take the comb 1 (3 mm) or 2 (6 mm), sheath the Haare in the direction of the Haarwirbel zum Scheitel vor dem Haarschneiden (Abb. 1). Bewegen Sie langsam die Haarschneidemaschine von unten nach oben und vom Kopf aus. Schneiden Sie Ihre Haare und das Wasser, beginnend vom unteren Hinterkopf und um die Ohren.
- Schritt 1**
- Setzen Sie den Kammaufsatzz 1 (3 mm) oder 2 (6 mm) auf. Halten Sie die Haare so, dass die Klinge nach oben zeigt. Schneiden Sie die Haare im Bereich des Scheitels mit dem Haarschneidegerät (Abb. 1). Bewegen Sie langsam die Haarschneidemaschine von unten nach oben und vom Kopf aus. Schneiden Sie Ihre Haare und das Wasser, beginnend vom unteren Hinterkopf und um die Ohren.
- Schritt 2**
- Switch off the unit, set the attachment for long hair 3 (9mm) or 4 (12 mm) and continue cutting hair near the crown of the head (pic. 2).
- Schritt 3 Cutting in the temple area**
- Switch off the unit, set the comb 1 (3 mm) or 2 (6 mm) and cut hair in the temple area. Then set the comb 3 (9 mm) or 4 (12 mm) and continue cutting the hair in the direction of the crown of the head.
- Schritt 4 Cutting in the frontal crown area**
- Using the comb 3 (9 mm) or 4 (12 mm), cut hair from the crown towards the top against the direction of hair growth (pic. 4). You can cut hair against hair growth and along hair growth, but bear in mind that hair that is cut against hair growth will be shorter than that which is cut along hair growth. Using the combs 1 (3 mm) and 2 (6 mm) for very short haircut. To longer hair, use the necessary comb. After cutting, clean the clipper with fingers and then sheath the hair strands between fingers and cut them with the clipper. You can use a brush: brush hair strands and cut them over the clipping (pic. 5, 6).
- Always start cutting from the back of the head. Comb hair with the comb to find out uneven strands.
- Schritt 5 Final part:**
- In the final stage of the haircut modeling, remove the attachment from the unit, turn it with the blades to the hair side and carefully cut hair on the temples and the neck. Do not press the unit strongly, when opened blades contact the skin, you can get an injury or cuts (pic. 7).
- Aligning the blades**
- If the blades were removed for cleaning, replacement, they need to be aligned.
- Align the blades on the flat and tighten the fastening screw. The lower blade should be rotated forward. If the rotation is not possible, the clipper cannot be used.
- When you cut hair, the blades, add several drops of oil (supplied) on the blades, switch on the unit for several minutes (30-40 sec.), then switch off the unit and take the plug out of the socket. Slightly loose the fastening screws of the lower blade and align the blades. After aligning the blades do not forget to tighten the fastening screws of the lower blades.
- Care and care**
- If the blades were removed for cleaning, replacement, they need to be aligned.
- Align the blades on the flat and tighten the fastening screw. The lower blade should be rotated forward. If the rotation is not possible, the clipper cannot be used.
- When you cut hair, the blades, add several drops of oil (supplied) on the blades, switch on the unit for several minutes (30-40 sec.), then switch off the unit and take the plug out of the socket. Slightly loose the fastening screws of the lower blade and align the blades. After aligning the blades do not forget to tighten the fastening screws of the lower blades.
- Specifications**
- Power rating: 220-240 V ~ 50 Hz
- Power consumption: 8 W
- Time of constant operation: 1 hour

The manufacturer reserves the right to change the device's characteristics without prior notice.

### Service life of the unit - 3 Jahre

### GUARANTE

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

**Instruction on modeling a haircut**  
Before cutting switch on the unit and make sure that it operates without malfunction, the blades run smoothly; if there is much oil on the blades, remove it with a dry cloth.

During operation of the unit, constantly check the power cord, do not allow its multiple over twisting, never switch off the unit and straighten the power cord.

The head of the person whose hair you are cutting should be at the level of your eyes.

Cover the shoulders with a towel, comb the hair.

**Reminder**  
Cut one-pass small amount of hair, if necessary repeat the cut to cut for additional haircut.

The best results are achieved while operating with dry, not wet hair.

**Start cutting**  
For the first time it is better to leave longer hair. With

This product conforms to the EMC-

### KAMMHAFTZ

- Niedriges Lässig
- Hoches Lässig
- Rückwärtiges Lässig
- Vorwärts Lässig

### HAARBÄRTE

- Aufsatzz 3 mm
- Aufsatzz 6 mm
- Aufsatzz 9 mm
- Aufsatzz 12 mm
- Frisierbürste
- Schmieröl
- Bürste

### Wichtige Vorsichtsmaßnahmen

- Lesen Sie die Betriebsanleitung vor der ersten Nutzung der Haarschneidemaschine aufmerksam durch.
- Vergewissern Sie sich vor dem Einschalten des Geräts, dass die Netzspannung mit der Spannung Ihres Geräts übereinstimmt.
- Diese Maschine ist für Kinder und behinderte Personen nicht geeignet.
- Die Einheit ist nicht für das Kinderspielzeug bestimmt.
- Bewahren Sie das Gerät in einem für Kinder unzugänglichen Ort auf.
- Never leave the operating unit unattended.
- Do not allow the children to use the unit as a toy.
- Keep the unit out of reach of children.
- Use the unit only for the intended purposes.
- Use only the attachment s and accessories, supplied with the unit.
- Do not use the unit in places with high humidity, while taking a bath or a shower. Do not keep the unit near a bath or a shower. Do not immerse the unit into water or other liquids; do not wash the unit under running water.
- Do not touch the unit with wet hands.
- Do not try to take the unit if it fell into water, immediately take the plug out of the socket. Do not touch water.
- Do not use the hair clipper if the power plug or the cord is damaged. Apply to the authorized service center for replacement of the power cord.
- Do not use the unit in places with high temperature. Do not place the power cord near hot surfaces.
- Switch off the unit and take the comb 1 (3 mm) or 2 (6 mm), sheath the Haare in the direction of the Haarwirbel zum Scheitel vor dem Haarschneiden (Abb. 1). Bewegen Sie langsam die Haarschneidemaschine von unten nach oben und vom Kopf aus. Schneiden Sie Ihre Haare und das Wasser, beginnend vom unteren Hinterkopf und um die Ohren.
- Schritt 1**
- Setzen Sie den Kammaufsatzz 1 (3 mm) oder 2 (6 mm) auf. Halten Sie die Haare so, dass die Klinge nach oben zeigt. Schneiden Sie die Haare im Bereich des Scheitels mit dem Haarschneidegerät (Abb. 1). Bewegen Sie langsam die Haarschneidemaschine von unten nach oben und vom Kopf aus. Schneiden Sie Ihre Haare und das Wasser, beginnend vom unteren Hinterkopf und um die Ohren.
- Schritt 2**
- Switch off the unit, set the attachment for long hair 3 (9mm) or 4 (12 mm) and continue cutting hair near the crown of the head (pic. 2).
- Schritt 3 Cutting in the temple area**
- Switch off the unit, set the comb 1 (3 mm) or 2 (6 mm) and cut hair in the temple area. Then set the comb 3 (9 mm) or 4 (12 mm) and continue cutting the hair in the direction of the crown of the head.
- Schritt 4 Cutting in the frontal crown area**
- Using the comb 3 (9 mm) or 4 (12 mm), cut hair from the crown towards the top against the direction of hair growth (pic. 4). You can cut hair against hair growth and along hair growth, but bear in mind that hair that is cut against hair growth will be shorter than that which is cut along hair growth. Using the combs 1 (3 mm) and 2 (6 mm) for very short haircut. To longer hair, use the necessary comb. After cutting, clean the clipper with fingers and then sheath the hair strands between fingers and cut them with the clipper. You can use a brush: brush hair strands and cut them over the clipping (pic. 5, 6).
- Always start cutting from the back of the head. Comb hair with the comb to find out uneven strands.
- Schritt 5 Final part:**
- In the final stage of the haircut modeling, remove the attachment from the unit, turn it with the blades to the hair side and carefully cut hair on the temples and the neck. Do not press the unit strongly, when opened blades contact the skin, you can get an injury or cuts (pic. 7).
- Aligning the blades**
- If the blades were removed for cleaning, replacement, they need to be aligned.
- Align the blades on the flat and tighten the fastening screw. The lower blade should be rotated forward. If the rotation is not possible, the clipper cannot be used.
- When you cut hair, the blades, add several drops of oil (supplied) on the blades, switch on the unit for several minutes (30-40 sec.), then switch off the unit and take the plug out of the socket. Slightly loose the fastening screws of the lower blade and align the blades. After aligning the blades do not forget to tighten the fastening screws of the lower blades.
- Care and care**
- If the blades were removed for cleaning, replacement, they need to be aligned.
- Align the blades on the flat and tighten the fastening screw. The lower blade should be rotated forward. If the rotation is not possible, the clipper cannot be used.
- When you cut hair, the blades, add several drops of oil (supplied) on the blades, switch on the unit for several minutes (30-40 sec.), then switch off the unit and take the plug out of the socket. Slightly loose the fastening screws of the lower blade and align the blades. After aligning the blades do not forget to tighten the fastening screws of the lower blades.
- Specifications**
- Power rating: 220-240 V ~ 50 Hz
- Power consumption: 8 W
- Time of constant operation: 1 hour

The manufacturer reserves the right to change the device's characteristics without prior notice.

### Service life of the unit - 3 Jahre

### GUARANT

Details regarding guarantee conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

**Instruction on modeling a haircut**  
Before cutting switch on the unit and make sure that it operates without malfunction, the blades run smoothly; if there is much oil on the blades, remove it with a dry cloth.

During operation of the unit, constantly check the power cord, do not allow its multiple over twisting, never switch off the unit and straighten the power cord.

The head of the person whose hair you are cutting should be at the level of your eyes.

Cover the shoulders with a towel, comb the hair.

**Reminder**  
Cut one-pass small amount of hair, if necessary repeat the cut to cut for additional haircut.

The best results are achieved while operating with dry, not wet hair.

**Start cutting**  
For the first time it is better to leave longer hair. With

This product conforms to the EMC-

## РУССКИЙ

### КАНАЛЫ СТРИЖКИ

- Низкие лезвия
- Высокие лезвия
-

## ČESKÝ

- STROJEK PRO STŘÍHÁNÍ**
- Spodní čepelka
  - Vrchní čepelka
  - Kliky pěnovitostní čepelky
  - Spinací napájení (0/1)

Během zvládnutí strojku pro stříhaní, vy budeste moci modelovat požadovaný frizur.

## Nástavec

Délka vlasů podle používání nástavců:

Nástavec

3mm

Nástavec

6mm

Nástavec

9 mm

Nástavec

12mm

Nástavec

12mm

Nástavec

9 mm

Nástavec

4 délka vlasů 12mm

Nástavec

12mm

Nástavec

3mm

Nástavec

2mm

Nástavec

1mm

Nástavec

9 mm

Nástavec

12mm

Nástavec

12mm

Nástavec

9 mm

Nástavec

12mm

Nástavec

12mm