

рис. 1

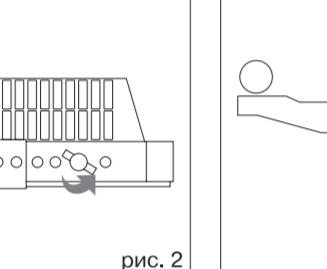


рис. 2

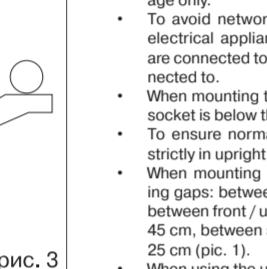


рис. 3

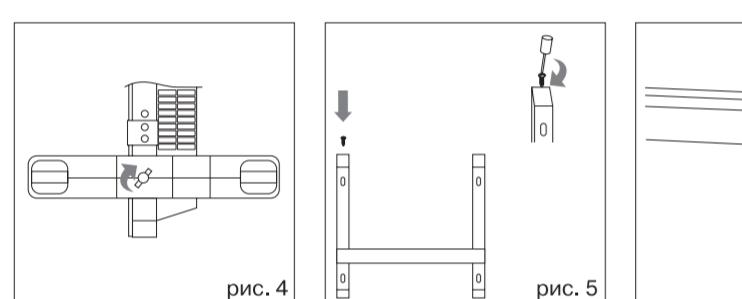


рис. 4

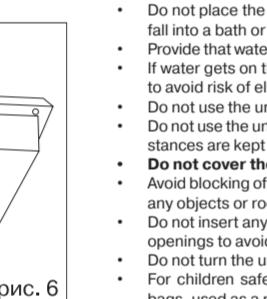


рис. 5

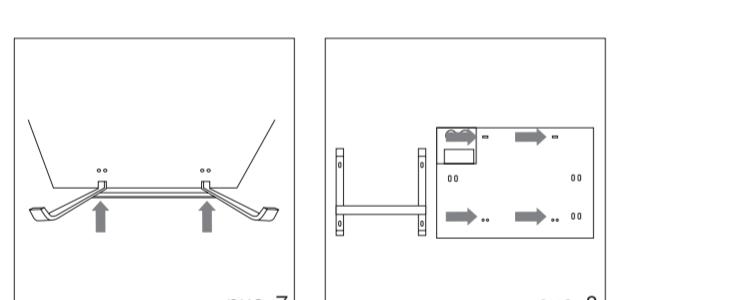


рис. 6



рис. 7



рис. 8

## ENGLISH

### CONVECTION FAN HEATER

Convection fan heater is intended for additional rooms heating.

#### Description

- 1. Unit front panel
- 2. Outgoing air grid
- 3. Bidschirm
- 4. Sensor control panel
- 5. Power switch «ON/Off»
- 6. Support wheels
- 7. Wall bracket
- 8. Support wheels bracket
- 9. Unit on/off button «On/Off»
- 10. «Mode» button for temperature selection
- 11. Timer setting button «+1°C»
- 12. Timer setting button «-1°C»
- 13. Sensor panel lock button «Lock (3 sec.)»
- 14. Sensor panel lock indicator
- 15. «Off» button
- 16. «+1°C»-Taste
- 17. «-1°C»-Taste
- 18. «Mode» button

For additional protection it is reasonable to install a residual current device (RCD) with nominal operation current not exceeding 30 mA. To install RCD contact a specialist.

#### SAFETY MEASURES

Before connecting and using the unit, read this instruction manual. Follow all the warnings and recommendations listed in this manual for using the unit. Keep this manual for future reference.

• Before using the unit, examine the power cord and the power cord connector closely and make sure that they are undamaged. Do not use the unit if the power cord or plug is damaged.

**Note:** **Default temperature is +25 °C in both modes.**

You can set the unit temperature by pressing the button «+1°C» or «-1°C» on the control panel or the button (17) «+1°C» or «-1°C» on the remote control panel. Repeatedly press the button (16) «+1°C» or «-1°C» on the remote control panel or the button (12) «+1°C» or «-1°C» on the remote control panel to select the required temperature. The temperature can be set in the range from 10 to 30 °C.

In the first time after the last temperature selection, the heater starts operating, the display shows the current temperature in the room.

**Important:** When connecting the unit with the power cord, make sure that voltage in your mains corresponds to the operating voltage of the unit.

• To avoid damage, transport the unit in original package.

• To avoid overheating, provide that no other electrical appliances with higher power consumption are connected to the same socket the fan heater is connected to. If the power consumption of the unit is in the range from 1 to 24 hours with the 1 hour step, after expiry of the operation time the indicator (15) will go out and the unit will stop working.

• For the normal Geräts operation it is necessary to turn off the power supply to the heating element.

• When connecting the unit with the power cord, make sure that the socket is below the unit and easy to access.

• This unit is equipped with the function «Child safety». Press and hold the button (13) «Lock (3 sec.)» for 3 seconds, you will hear a sound signal, the indicator (14) will light up on the control panel. To switch the function off press and hold the button (13) «Lock (3 sec.)» again.

• To switch the unit off, press the button (9) «Off» or the button (15) «Off» on the remote control panel and then set the switch to the position «Off», then plug the unit.

**Note:** When connecting the unit with a bath or shower, make sure that the water does not get on the unit control panel. Provide that water does not get on the unit control panel. Turn off the unit when the water is on the unit control panel. To switch the unit off, press the button (9) «Off» or the button (15) «Off» on the remote control panel and then set the switch to the position «Off», then plug the unit.

• It is not guaranteed that the shower will not reach the unit.

• When the unit is connected to a bath or shower, filled with water, provide that water does not get on the unit control panel. If water gets on the unit control panel, unplug it before touching to avoid risk of electric shock.

• Do not use the unit in the rooms where inflammable substances are kept or used.

• Do not use the unit during operation.

• Avoid damage to the unit by dropping it on the floor or hitting it against a hard surface.

• Repeatedly press the button (10) «Mode» on the control panel or the button (18) on the remote control panel to select the «Frost Watch» function, the symbol «\*» will appear on the display and the temperature of the environment will be shown. The unit must be switched on when the temperature drops below +7°C and will maintain a constant temperature of +7°C in the room.

**Attention:** Do not allow children to play with polyethylene bags, plastic packaging film, Danger of suffocation!

• Do not use the unit during operation.

• Avoid damage to the unit by dropping it on the floor or hitting it against a hard surface.

• Do not use the unit during operation.

